


PLC LIGHTING

14892 14894 14896

INSTALLATION INSTRUCTIONS:

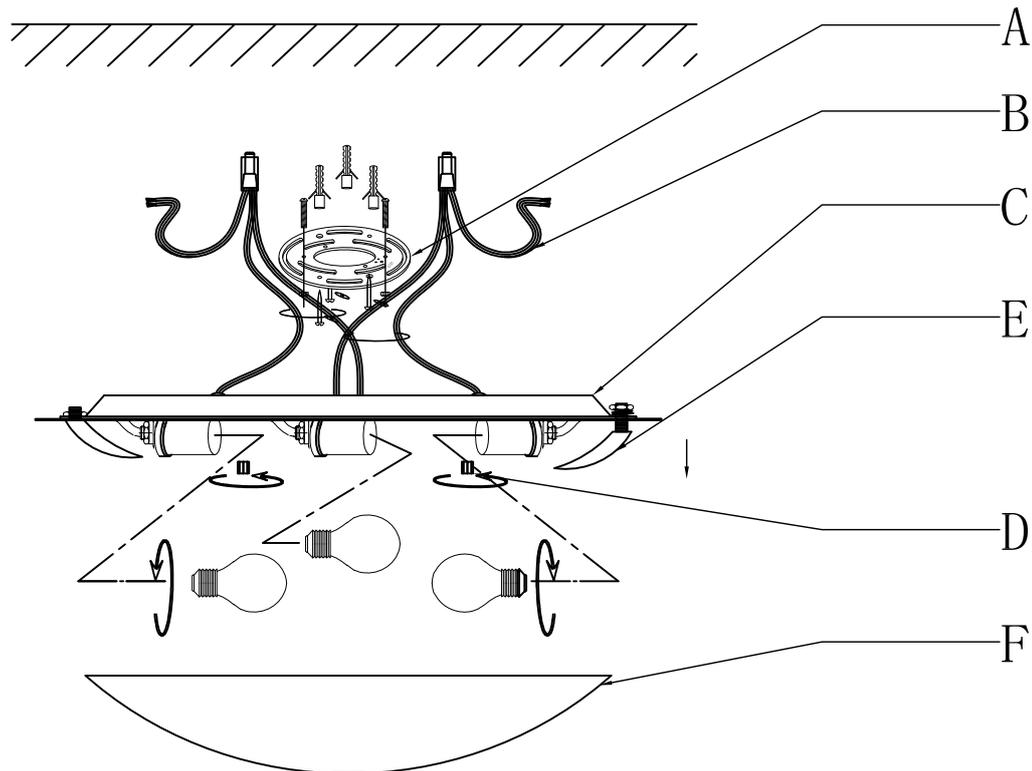

- 1, Ensure mains supply is switch off.
- 2, Fit mounting crossing bar(A) onto mounting surface with self-tapping screws.
- 3, Make the wiring connections: Using wire connectors (B) connect the house white wire(s) to the fixture white(or ribbed) lead(s); connect the house black(or red) wire(s) to the fixture black(or smooth) lead(s). Make sure there are no exposed wires or stands, and the connections are secured.
- 4, Fit canopy(C) onto crossing bar with screws (D).
- 5, Release metal clips (E) from fitting.
- 6, Screw on bulbs into lampholder.
- 7, Fit glass shade(F) onto fitting and secured with metal clips.

WARNING:

- Electricity supply required 110-120v 60 hz alternating current.
- Use only the correct light bulbs as stipulated on the luminaries .
- Disconnect the power and allow fitting cool down before cleaning or changing bulb(s).
- If any malfunction occurs, switch of mains and contact a qualified electrician .
- Do not modify this unit in any manner.